

# USB CONTROLLERS

DISCO  
SOUND



## IDJ2

Code: 15-2252 Carton qty: 4

### TWIN USB/SD MEDIA CONTROLLER WITH SCRATCH

Professional 2U player with DJ controls

- Blue-lit LCD
- SCRATCH & DSP effect mode
- PITCH control
- Function button (rubber) : Open/Close, Play/Pause, CUE, Skip, +/-, Search +/-, Time, Single/Continuous, Repeat, Programme, LOOP, RELOOP (In/Out), Pitch +/- (24%), JOG (Frame search +/-)
- Anti-shock memory
- Plays MP3 files from an SD card or a USB stick up to 4Gb
- USB2.0 Port for USB storage
- Assignable control SD Play/Pause

Freq. range : .....20Hz-20kHz  
 S/N ratio : ..... 80dB  
 THD : ..... 1%  
 Power supply : .....100-240Vac, 50/60Hz



## CDJ101

Code: 15-2310 Carton qty: 12

### MINI USB CONTROLLER

With 5" touch sensitive jog wheel, Pitch Fader, Transport Control and Navigation Encoder

- USB Powered
- 7 MIDI Messages
- 8 Selectable MIDI Channels
- 1 x 100mm Pitch Fader
- 1 x Touch Sensitive Jog Wheel with touch sensitivity adjustment
- 2 x Push buttons with LED Ring indication
- 1 x Rotary Encoder with 'Push to switch' function
- DJ Software for MAC/PC included : DECKADANCE LE

Dimensions : ..... 210 x 140 x 65,5mm  
 Weight : ..... 575g



Order on-line at [www.lotronic.com](http://www.lotronic.com)