Continut colet

- router ADSL2
- adaptor alimentare
- cablu RJ45
- 2 cabluri RJ11
- ghid de instalare

Descriere stare LED-uri

Indicator	Stare	Descriere
Alimontara	OFF	Fara alimentare
Aimentare	ON	Alimentare pornita
WLAN	ON	WLAN este OK
	Blink (palpait)	Transfer date WLAN
Internet	Blink	Transfer date ADSL
LAN	ON	Conexiune Ethernet OK
	Blink	Transfer date Ethernet
	Palpait rapid	Linie ADSL in actaulizare
ADSL	ON	ADSL conectat

Configurare calculator

- In exemplele de mai jos se face referire la sistemul de operare Windows XP.
- 1. Mergeti in meniul Start / Control Panel si faceti click pe Network Connections.

Control Panel				×
File Edit View Favorites Too	ls Help		1	2
(G and + (O + 1))	Search 🜔 Fo	iders		
Address 🕞 Control Panel			- 🖻	50
Present 6		2	1	^
Control Panel Control Panel Switch to Category View	Network Connections	Phone and Modem	Power Options	
See Also		9	3	
 Windows Update Help and Support 	Faces	Language	Cameras	
	Scheduled Tesks	Sounds and Audio Devices	Speech	

- 2. Faceti dublu click pe Local Area Connection.
- 3. In Local Area Connections, faceti click dreapta, apoi click pe Properties

eneral Support	
Connection	
Status.	Connected
Duration:	00:19:32
Speed	100.0 Mbps
Activity Sent	- 🗐 Received
Packets:	27 0
Properties Disable	

4. Selectati Internet Protocol (TCP/IP) si faceti click pe Properties.

Lecal	Area Conneel	tion Properti	89	20
General	Authentication	Advanced		
Connec	st using:			
-	SUSTeK/Broade	com 440x 10/* 00) Integra	ted Controller
Thiz co	nnection uses the	e following items:	(Configure
N N N N	Client for Micros File and Printer QoS Packet Sc Internet Protoco	off Networks Sharing for Micro heduler	soft Net	Works
	notal j	Orientalia		Propenses
Tran wide acro	area network pro	Protocol/Internet stocol that provid nnected network	Protoco ies comn	I. The default nunication
Sho	w icon in notifical	tion area when c	onnecte	d
		C	0K	Cancel

- 5. Bifati Obtain an IP address automatically si Obtain DNS server address automatically.
- 6. Apasati pe **OK** pentru terminarea configurarii.

seneral	Alternate Configuration	
You can this cap the app	n get IP settings assig sability. Otherwise, you ropriate IP settings.	pred automatically if your network supports u need to ask your network administrator for
00	btain an IP address a	utomatically
OU	se the following IP ad	diess:
TPa	ddie::::	
Site	opt mark;	
Deta	all galering:	
00	btain DNS server add	tress automatically
OU	re the following DNS	server addresses
Post	erred DINS. server	
Aber	nate DNS server	
		Advanced

Configurarea cu ajutorul browserului WEB.

Deschideti browserul de web (Internet Explorer, Mozilla Firefox sau alt browser pe care-l utilizati), introduceti adresa IP a routerului care este setata implpicit la valoarea 192.168.1.1 si faceti click pe GO, va apare o fereastra care va va cere un nume de utilizator si o parola. Valorile implicite sunt "admin" pentru user name si tot "admin" pentru parola.



In acest moment sunteti logat in routerul ADSL2.

Quick start



Pentru informatii detaliate cu privire la setarile WAN, consultati sectiunea Setari Interfata din acest manual.

Utilitarul Quick Start Wizard este util pentru setarea rapida a dispozitivului pentru conectarea la serviciul de internet (ISP) doar in cativa pasi. Este un ghid util mai ales pentru prima utilizare a dispozitivului. Pentru o setarre rapida va rugam sa urmariti pasii de mai jos

uick St	art
The V	Izard will guide you through these four quick steps. Begin by clicking on NEXT.
	Step 1. Set your new password
	Step 2. Choose your time zone
	Step 3. Set your Internet connection
	Step 4. Wreless network configuration
	Step 5. Save settings of this ADSL Router

Pasul 1. Stabilirea unei noi parole

Quick Start -	Password	
You may ch to continue.	ange the admin account passwo	rd by entering in a new password. Click NEX
	New Password :	
Cont	emed Password	1

Pasul 2. Setarea orei locale

Quick Start - Time Zone Select the appropriate time zone for your location and click NEXT to c	ontinue.
(OMT) Greenwich Mean Time : Dublin, Edinburgh, Lisbon, London	
	ACK NEXT EXIT

Quick Start - ISP Conne	ection Type
Select the Internet connection	on type to connect to your ISP. Click NEXT to continue.
O Dynamic IP Address	Choose this option to obtain a IP address automatically from your ISP.
Static IP Address	Choose this option to set static IP information provided to you by your ISP.
PPPOE/PPPoA	Choose this option if your ISP uses PPPoE/PPPoA. (For most DSL users)
O Bridge Mode	Choose this option if your ISP uses Bridge Mode.

		DACK NEXT, EXT.
uick Start - PPPoE/PPF	PoA	
Enter the PPPoE/PPPoA inform	ation provided to you by your ISP	Click IEXT to continue.
	NUMBER OF STREET, STREE	10201 2020 Constanting Constanting Constanting Constanting Constanting Constanting Constanting Constanting Const
Username:	username	
Password	•••••	
VPt	0 (0~255)	
	33 (1-65535)	
VCL		
VCt Connection Type	PPPoE LLC	
VCt Connection Type:	PPPoE LLC	

Pasul 4. Configurarea retelei wireless.

Quick Start - Wlan	
You may enable/disable Wan,	change the Wilan SSID and Authentication type in this pag
Access Point :	Activated Deactivated
SSID:	JCG012345
Broadcast SSID :	⊙ Yes ◯ No
Authentication Type :	Disabled

Pasul 5. Salvare setari router ADSL





Depanare

1. Probleme cu pornirea router-ului

Daca nici un LED nu se aprinde, verificati legatura dintre adaptorul de alimentare si router. Daca eroarea persista, s-ar putea sa fie o problema de hardware si trebuie sa contactati un service specializat.

Daca ati uitat poarola, incercati cu username-ul si parola implicita: "admin". Daca nici asa problema nu este rezolvata, apasati si tineti apasat butonul de resetare al routerului pentru a reveni la setarile din fabrica (toate celelalte setari se vor pierde si va trebui sa configurati din nou routerul).

2. Probleme cu interfata WAN

Problema: Initializarea conexiunii PVC (Linesync) esuata.

Solutie: Verificati conexiunea cablurilor sa fie corecte, inclusiv in priza de perete (daca e cazul). LED-ul ADSL de pe panoul frontal ar trebui sa fie aprins. Verificati ca VPI, VCI, "encapsulation type" si "multiplexing settings" sa fie corecte (verificati cu furnizorul de servicii internet).

Problema: deconectari frecvente ADSL

Solutie: Verificati ca toate aparatele conectate la aceeasi linie telefonica (modem, telefon, fax, modem analogic) sa aiba filtre intre aparat si soclul de perete. Lipsa acestor filtre poate fi cauza deconectarilor frecvente.

3. Probleme cu interfata LAN

Problema: Nu exista raspuns la cereri conectare in retea LAN (ping).

Solutie: Verificati LED-urile Ethernet de pe panoul frontal. LED-ul ar trebui sa fie pornit pentru calculatorul care este conectat. Daca nu este asa, verificati conexiunile cablurilor intre router si calculator. Dezactivati orice aplicatie firewall si verificati corectitudinea adreselor IP si subnet mask la router si statiile de lucru.

Compania LECHPOL declara ca produsul ML0512 respecta cerintele esentiale si alte prevederi pertinente ale directivei 1999/5/EC. Declaratia de conformitate in original poate fi descarcata de pe site-ul www.lwchpol.eu



Nu aruncati deseurile provenite din aparate electronice la gunoiul menajer. Reciclati aceste deseuri la centrele de colectare special amenajate pnetru colectarea deseurilor provenite din aparatura electrica si electronica.